



Bird Tower

Assembly Instructions




**** This product is intended to be assembled using wood glue to ensure its durability and longevity. Wood glue is only need when connecting the wood pieces, it is not needed to apply the velvet or when add in the acrylic front.****


Step 1:

Separate pieces into their respective piles.


Velvet:

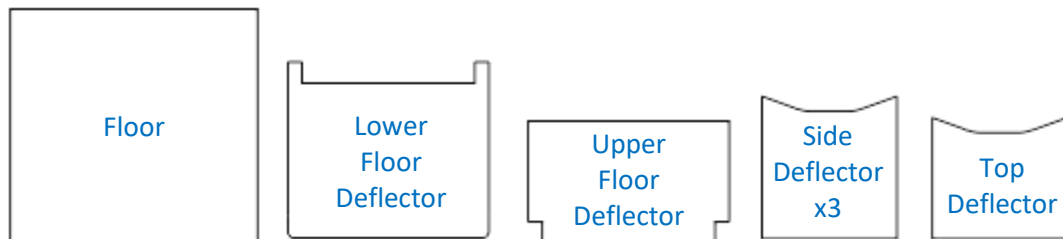

Tray:

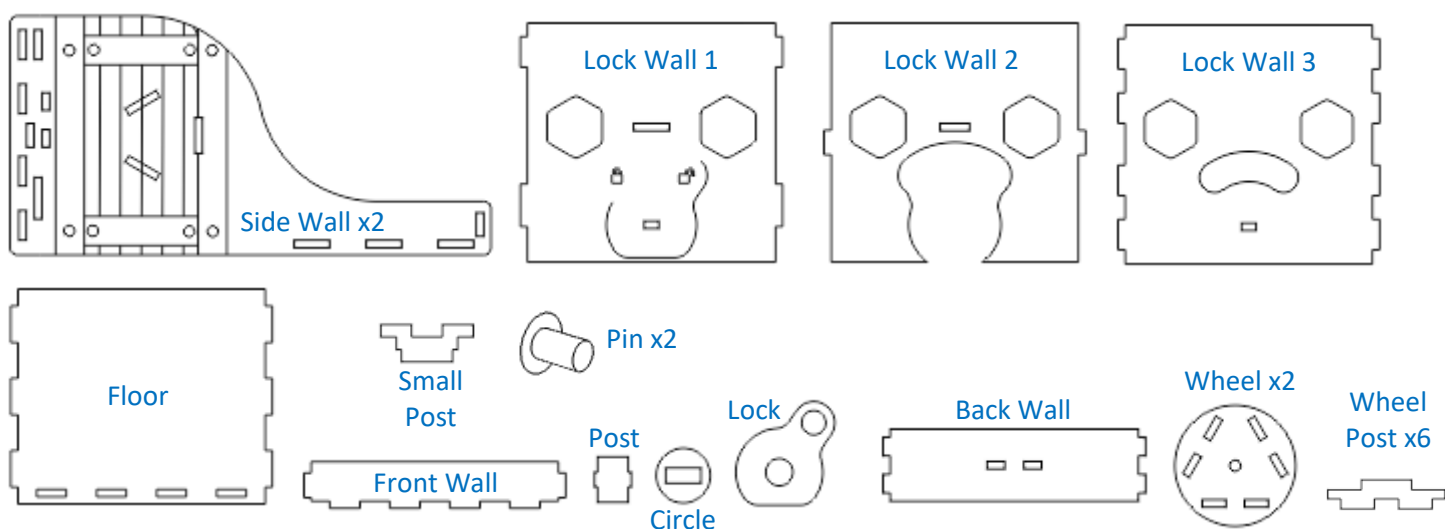


Bird Tower (with Acrylic Front):

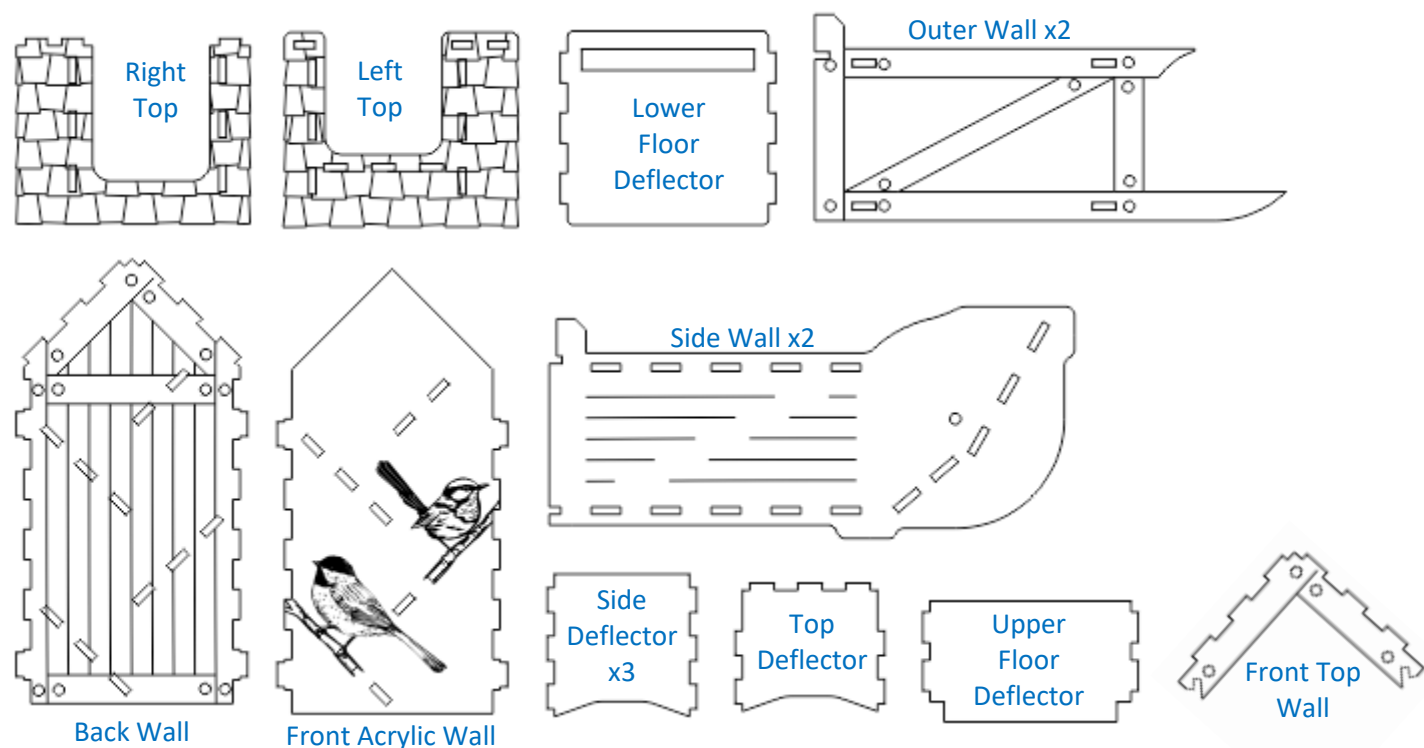

Blue arrows indicate connection points and red arrows highlight correct facing/direction of pieces

Step 2 (Tray pieces):


Attach the Front Wall piece to the Floor piece as shown.

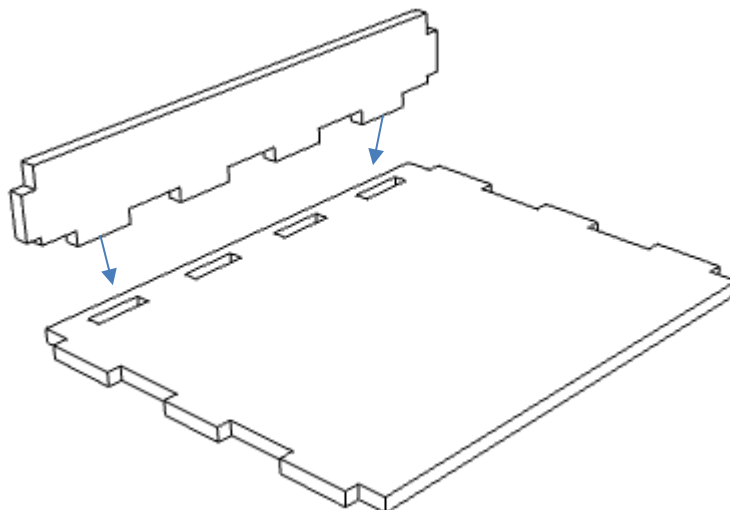

Note for applying Velvet for Steps 3-7 – Once you peel off the brown layer that covers the adhesive side ensure you place directly onto the wood and not back onto the brown layer to apply later, the velvet will form a strong hold with the material it is applied to. Refer to assembly video for more tips on applying the velvet if needed.


Step 3 (Velvet pieces):

Attach the Velvet Side Deflector piece over the Bird Tower Side Deflector piece as shown. Repeat this step 3 times.

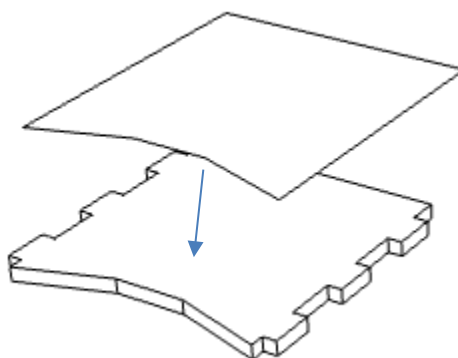


Step 4 (Velvet pieces):

Attach the Velvet Top Deflector piece over the Bird Tower Top Deflector piece as shown.

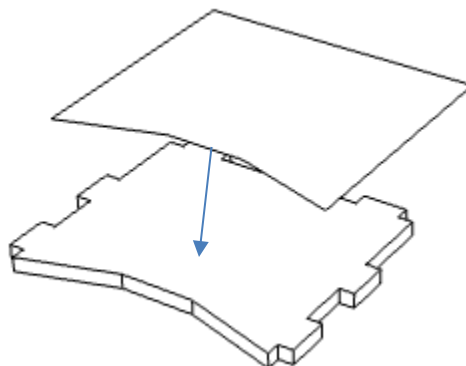


Step 5 (Velvet pieces):

Attach the Velvet Lower Floor Deflector piece over the Bird Tower Lower Floor Deflector piece as shown.

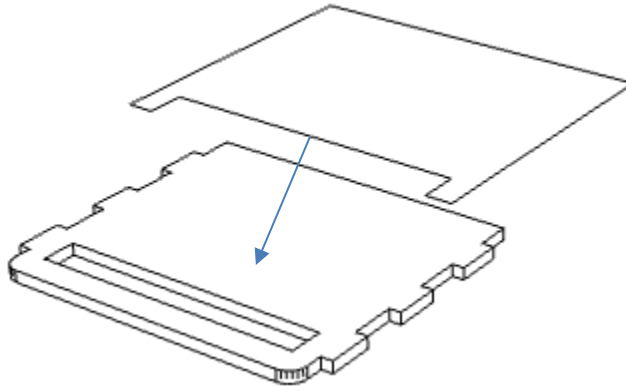


Step 6 (Velvet pieces):

Attach the Velvet Upper Floor Deflector piece over the Bird Tower Upper Floor Deflector piece as shown.

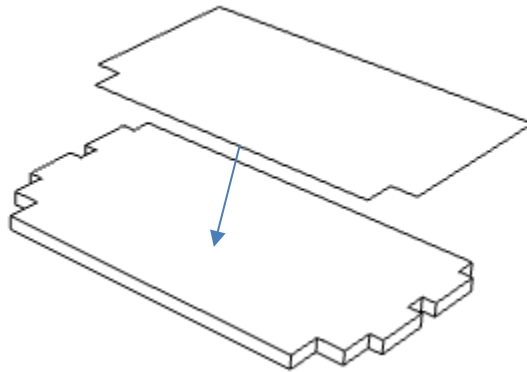

Step 7 (Velvet pieces):


Attach the Velvet Floor piece over the Tray Floor and Front Wall pieces as shown. Fold up the end of the Velvet Floor piece where the dotted line is shown when placing on Tray Front Wall piece.

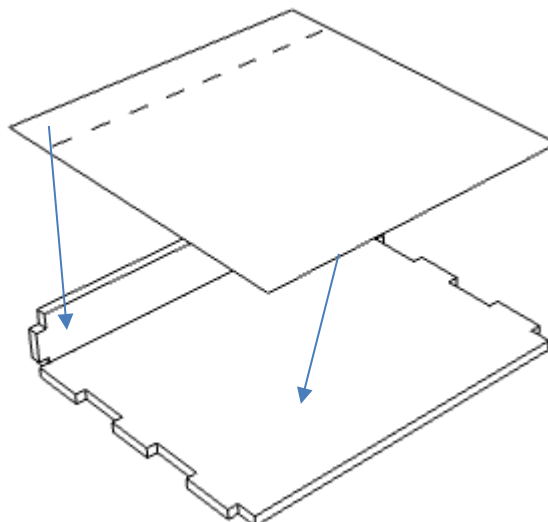

Bird Tower Instructions


Step 8 (Bird Tower pieces):

Attach the three Side Deflector pieces to the Back Wall piece (on the side without etching), making note the Velvet on the Side Deflector pieces are up as shown.

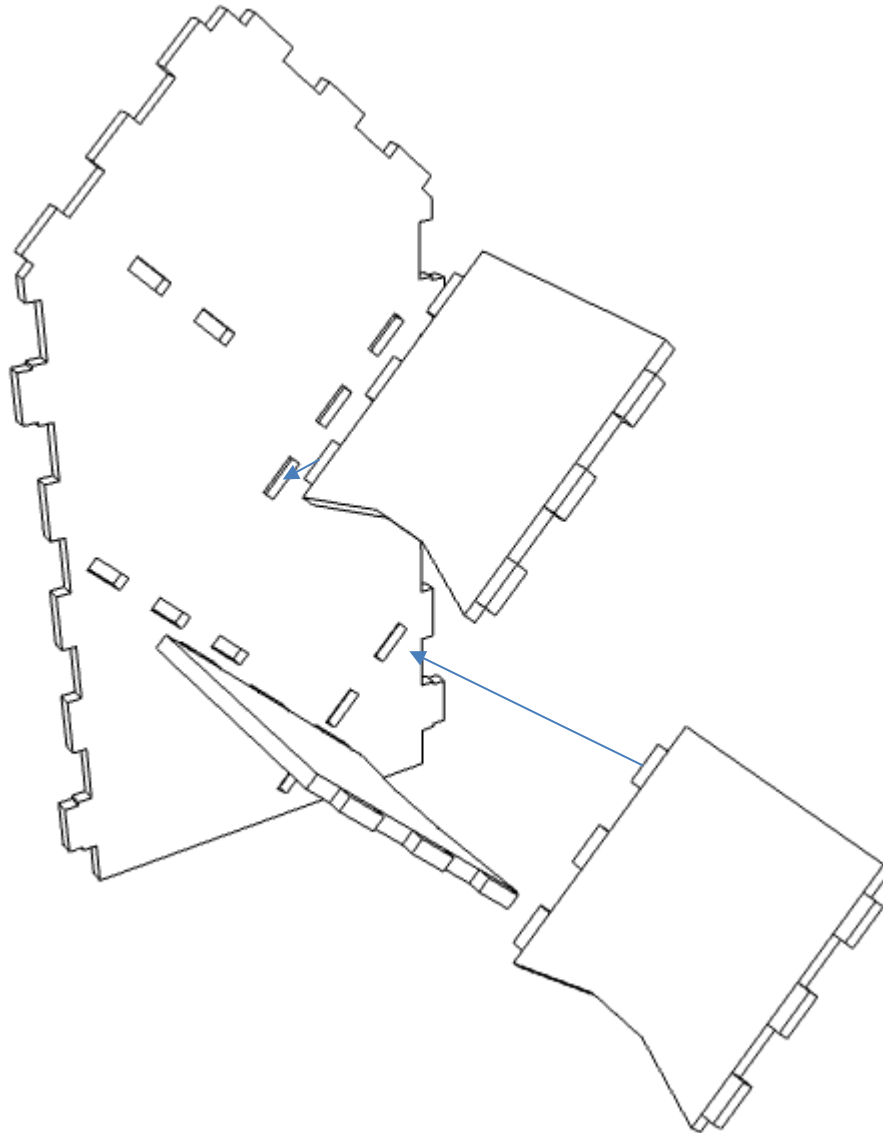

Step 9 (Bird Tower pieces):


Attach the Top Deflector piece to the Back Wall piece (on the side without etching), making note the Velvet on the Top Deflector piece is up as shown.

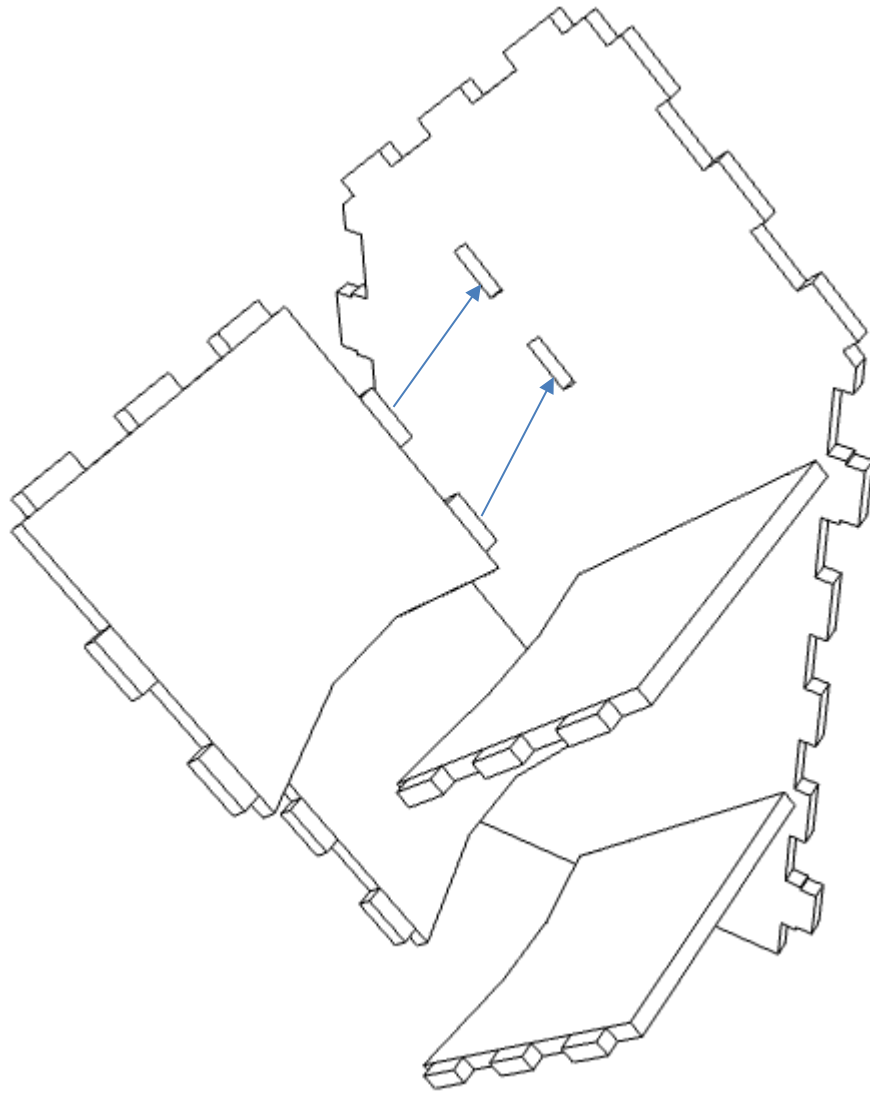

Note for Acrylic – the side with the brown paper covering is the front of the acrylic piece. The paper was left to help indicate what side should be facing front (away from the back wall piece), and should be removed before assembly.
No wood glue is necessary when attaching pieces to the Acrylic Front Wall piece.


Step 10 (Bird Tower pieces):

Gently attach the Acrylic Front Wall piece to the Side Deflector and Top Deflector pieces, making note it is facing the correct way as shown. As the acrylic material is stronger than the plywood, we recommend slowly attaching the Acrylic Front Wall piece, and applying pressure where the wood comes through the acrylic when attaching.

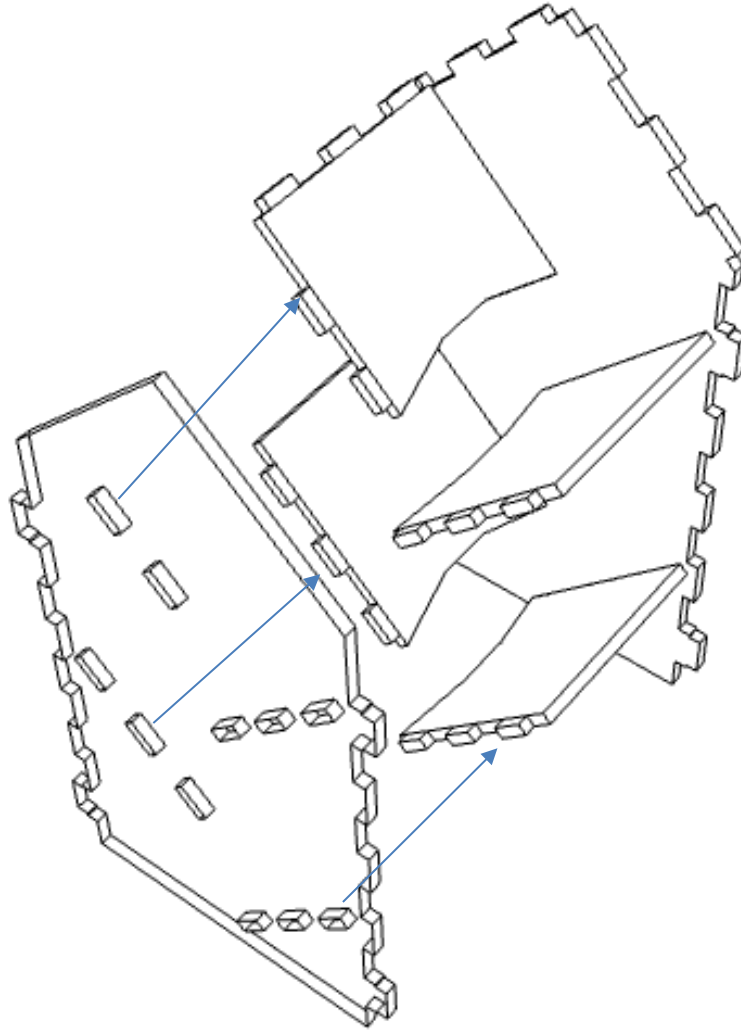


Step 11 (Bird Tower pieces):

Attach one of the Side Wall pieces to the Back Wall and Acrylic Front Wall pieces, making note it is facing the correct way as shown. Note the Side Wall piece etching will be facing outside when assembling. **As the acrylic material is stronger than the plywood, we recommend slowly attaching the Side Wall piece to the Acrylic Front Wall piece, and evenly applying pressure where the wood comes through the acrylic when attaching.**

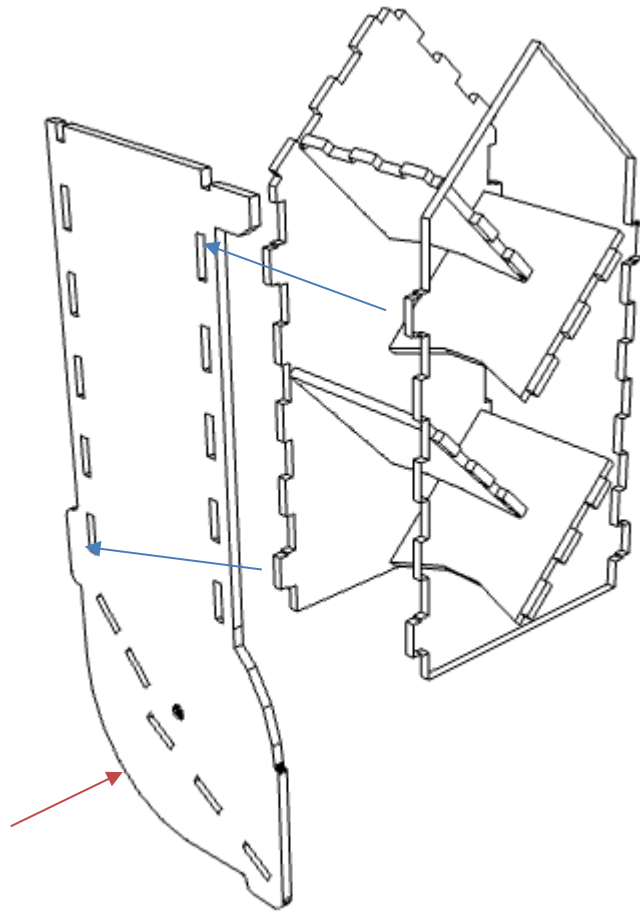


Step 12 (Bird Tower pieces):

Slide the Upper Floor Deflector piece into the Lower Floor Deflector piece, making note it is facing the correct way as shown. **Do not use glue for this Step to allow pieces to be flexible during Step 13.**

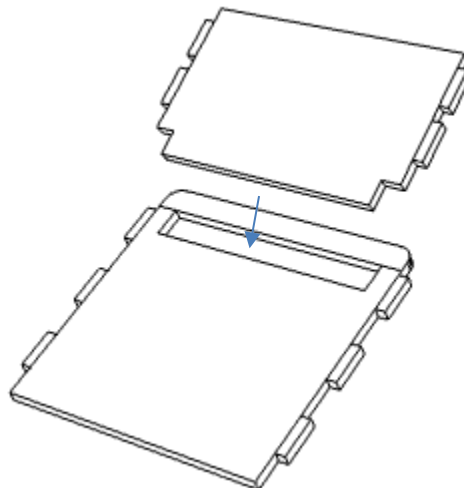


Step 13 (Bird Tower pieces):

Attach the Upper Floor Deflector and Lower Floor Deflector pieces to the Side Wall piece, making note they are facing the correct way as shown.

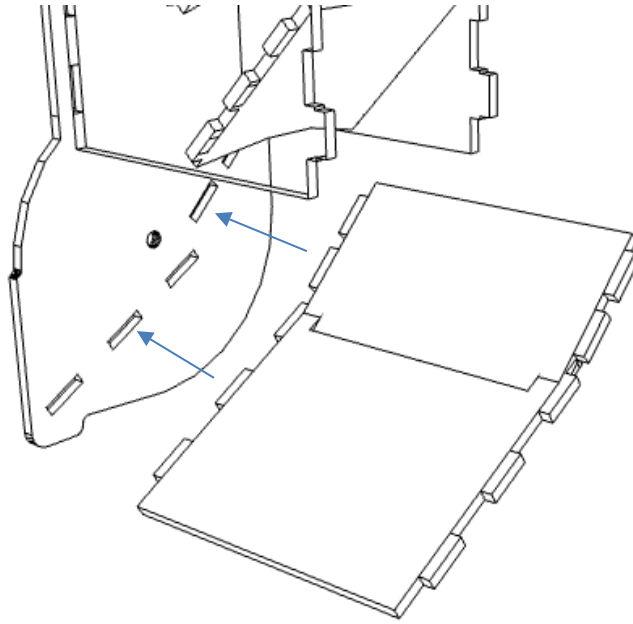


Step 14 (Bird Tower pieces):

Attach the remaining Side Wall piece to the Back Wall, Floor Deflectors, and Acrylic Front Wall pieces, making note it is facing the correct way as shown. **As the acrylic material is stronger than the plywood, we recommend slowly attaching the Side Wall piece to the Acrylic Front Wall piece, and evenly applying pressure where the wood comes through the acrylic when attaching.**

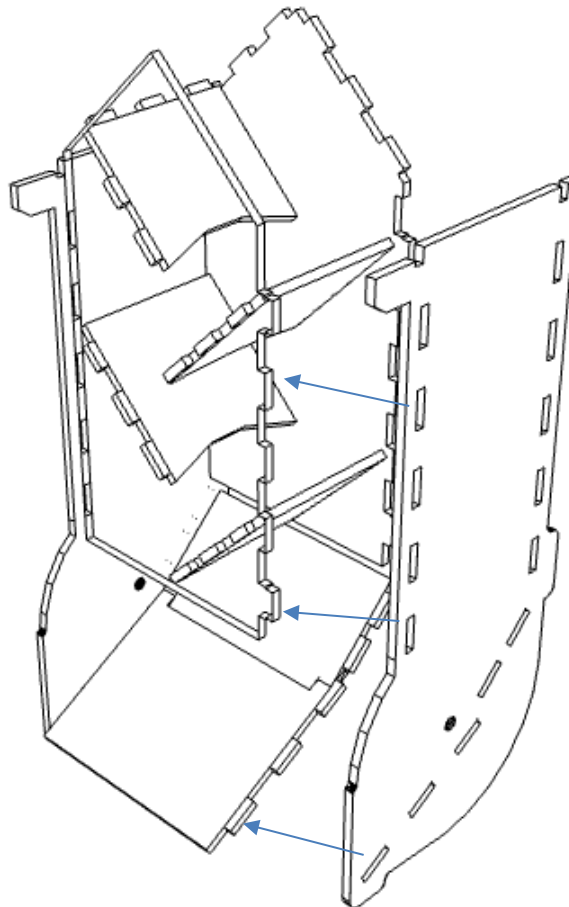


Step 15 (Bird Tower pieces):

Slide the Front Top Wall piece onto the notches on the top of the Side Wall pieces near, making note it is facing the correct way as shown.

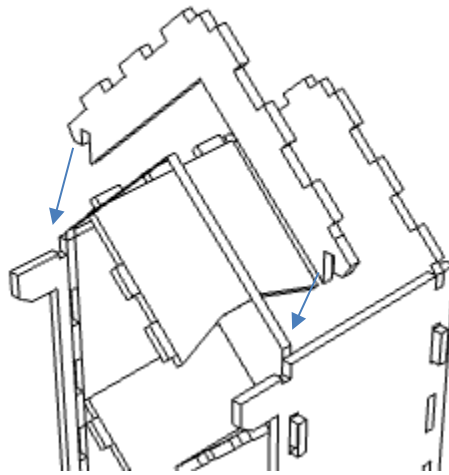


Step 16 (Bird Tower pieces):

Attach one of the Outer Wall pieces to the Side Wall piece, making note it is facing the correct way as shown.

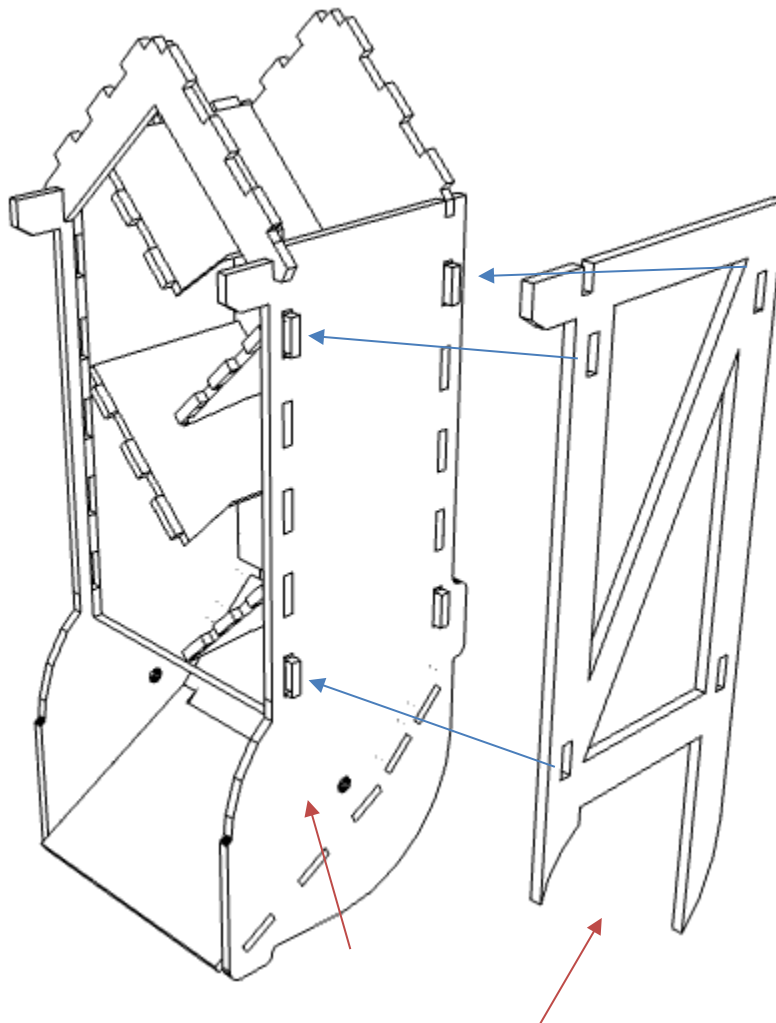


Step 17 (Bird Tower pieces):

Attach the remaining Outer Wall piece to the other Side Wall piece, making note it is facing the correct way as shown.

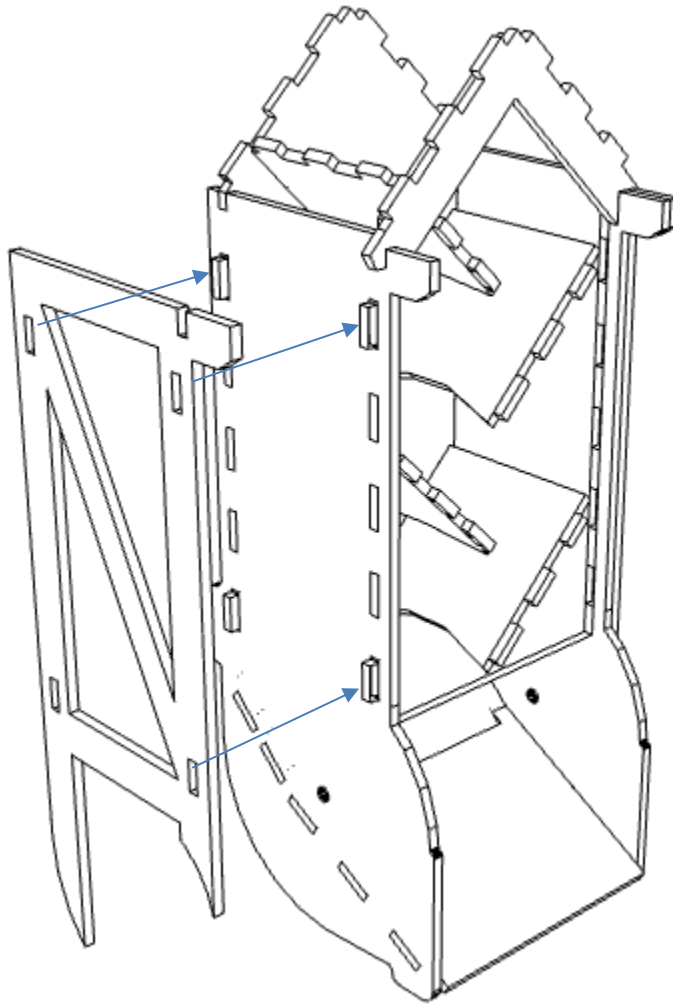


Step 18 (Bird Tower pieces):

Attach the Right Top piece to the Back Wall and Front Top Wall pieces, making note it is facing the correct way as shown.

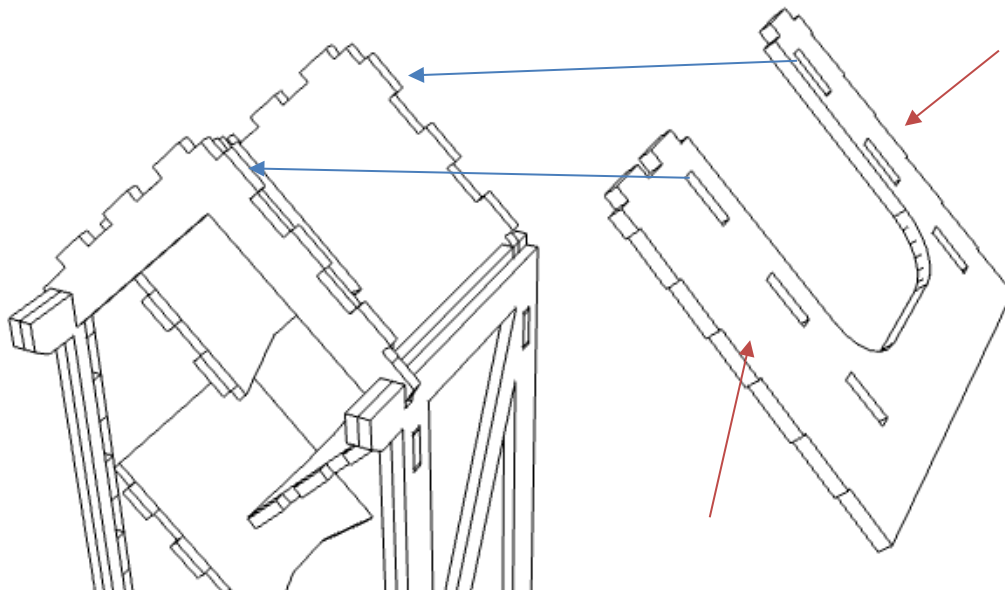

Step 19 (Bird Tower pieces):

Attach the Left Top piece to the Back Wall, Right Top, and Front Top Wall pieces, making note it is facing the correct way as shown.

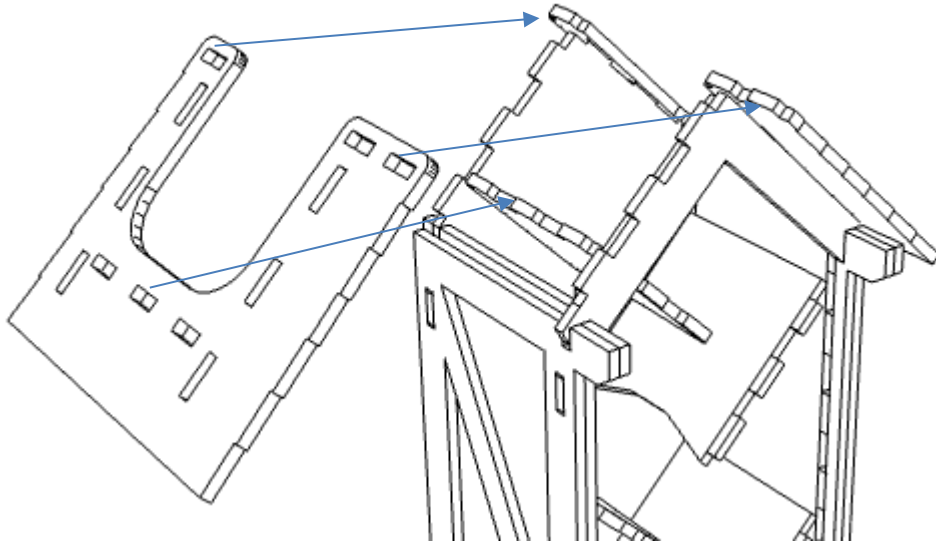


Bird Tower is now complete.

Tray Instructions


Step 20 (Tray pieces):

Attach three of the Wheel Post pieces to the Wheel piece, making note they are facing the correct way as shown.

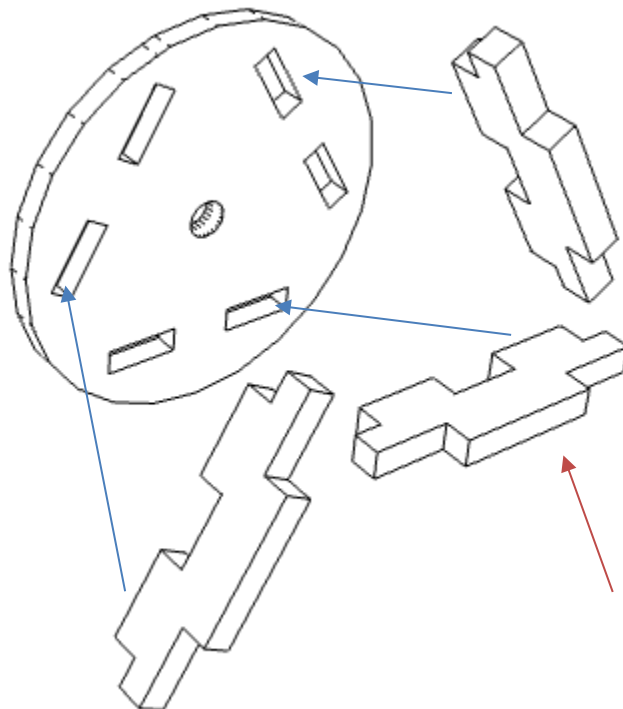

Step 21 (Tray pieces):


Slide one of the Pin pieces through the middle of the Wheel piece, making note it is facing the correct way as shown.

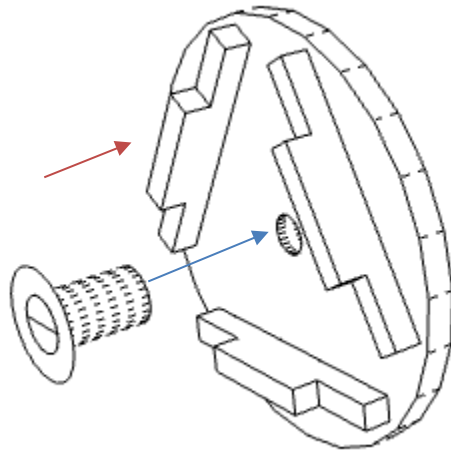

****Repeat Steps 20 and 21 again with the remaining Wheel, Wheel Posts and Pin pieces****


Step 22 (Tray pieces):

Attach the Wheel assembled in Steps 20 and 21 to one of the Side Wall pieces (with the etching facing out), making note it is facing the correct way as shown.

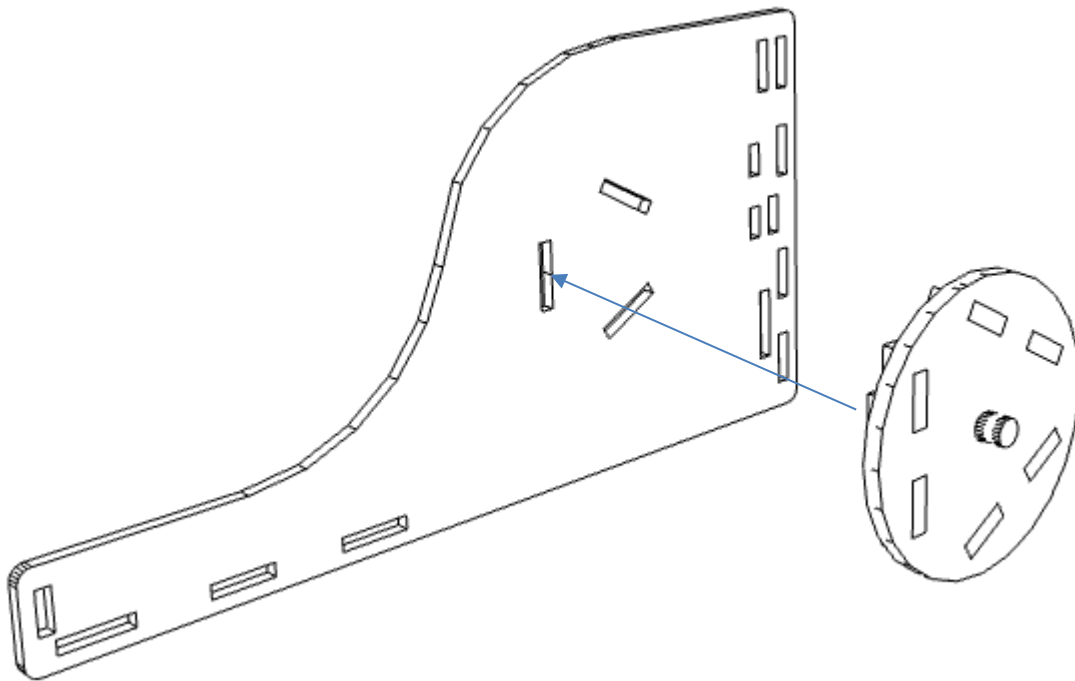


Step 23 (Tray pieces):

Attach the Front Wall and Floor pieces assembled in Step 2 to the Side Wall piece assembled in Step 22, making note it is facing the correct way as shown.

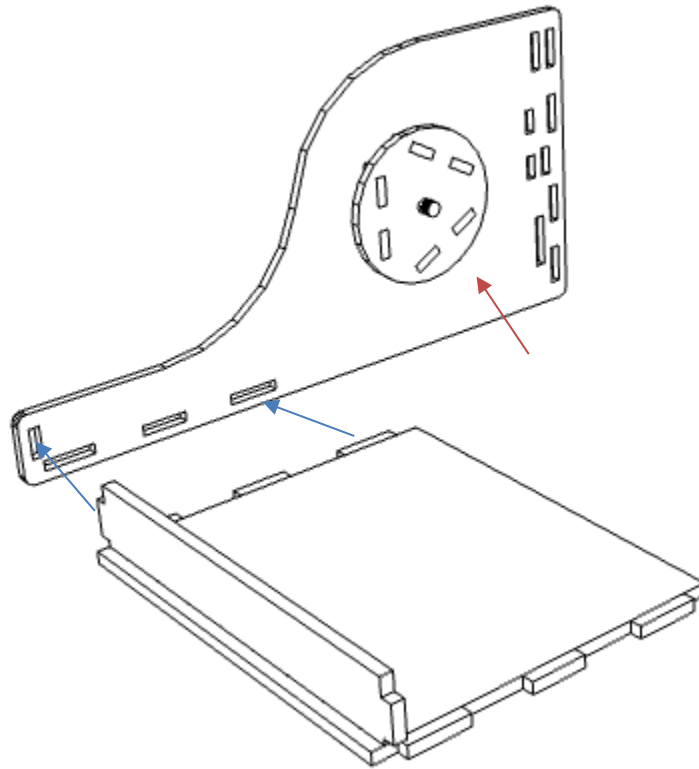


Step 24 (Tray pieces):

Attach the Small Post piece to the Back Wall piece, making note it is facing the correct way as shown.

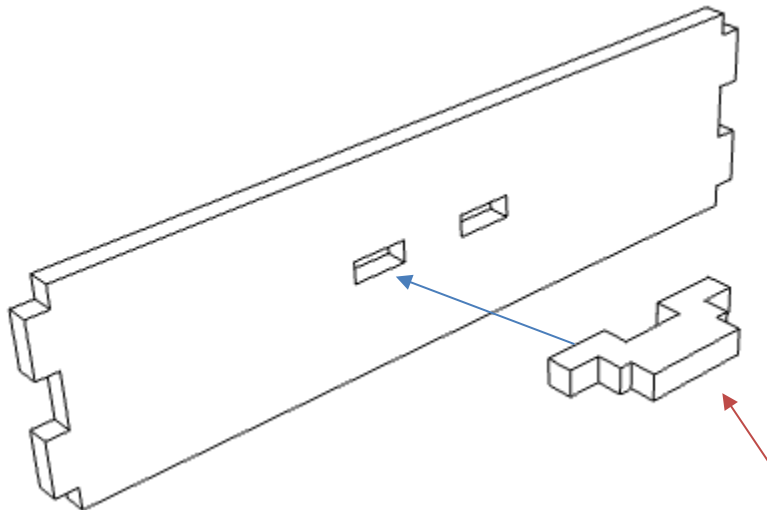


Step 25 (Tray pieces):

Attach the Small post and Back Wall pieces assembled in Step 24 to the back of Lock Wall 1, making note it is facing the correct way as shown.

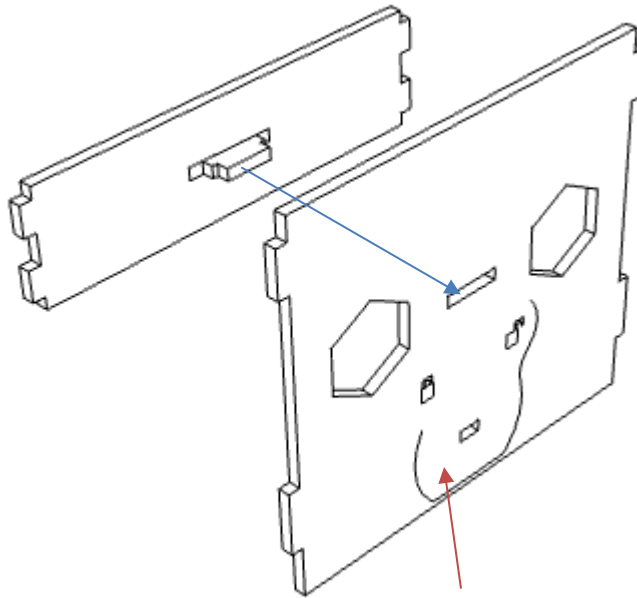


Step 26 (Tray pieces):

Attach the Lock Wall 2 piece to the Small Post and Lock Wall 1 pieces, making note it is facing the correct way as shown.

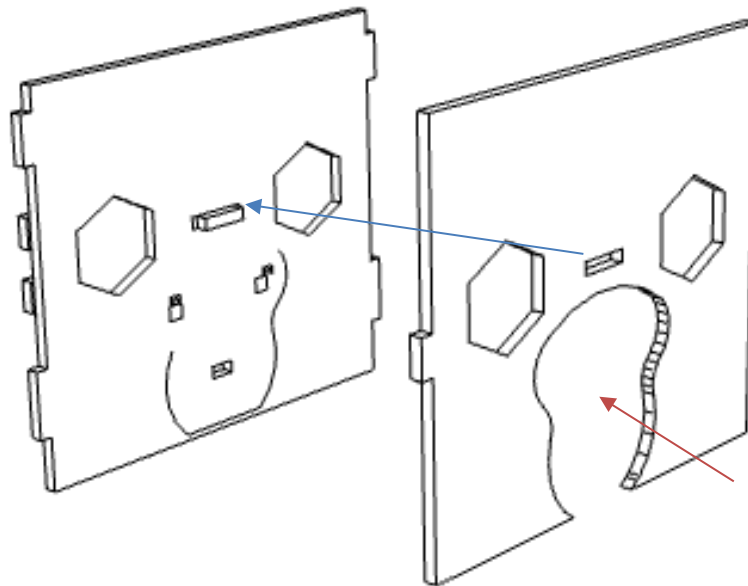


Step 27 (Tray pieces):

Attach the Post piece to the Lock Wall 1 piece as shown.

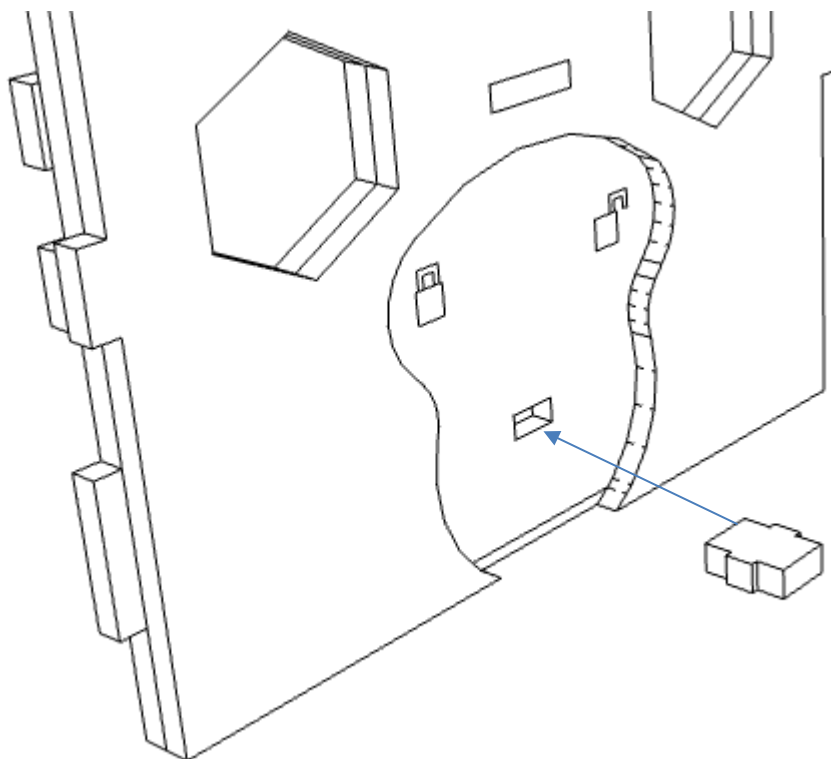


Step 28 (Tray pieces):

Attach the Circle piece to the Post piece as shown.

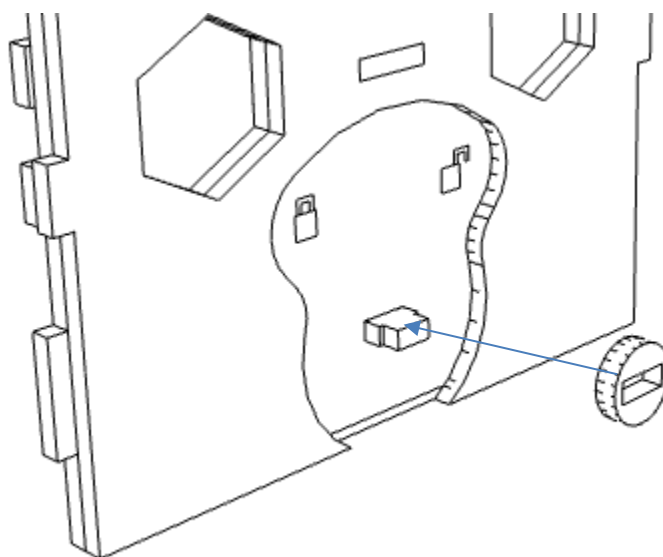


Step 29 (Tray pieces):

Place the Lock piece in the Lock Wall 2 and Circle pieces as shown.

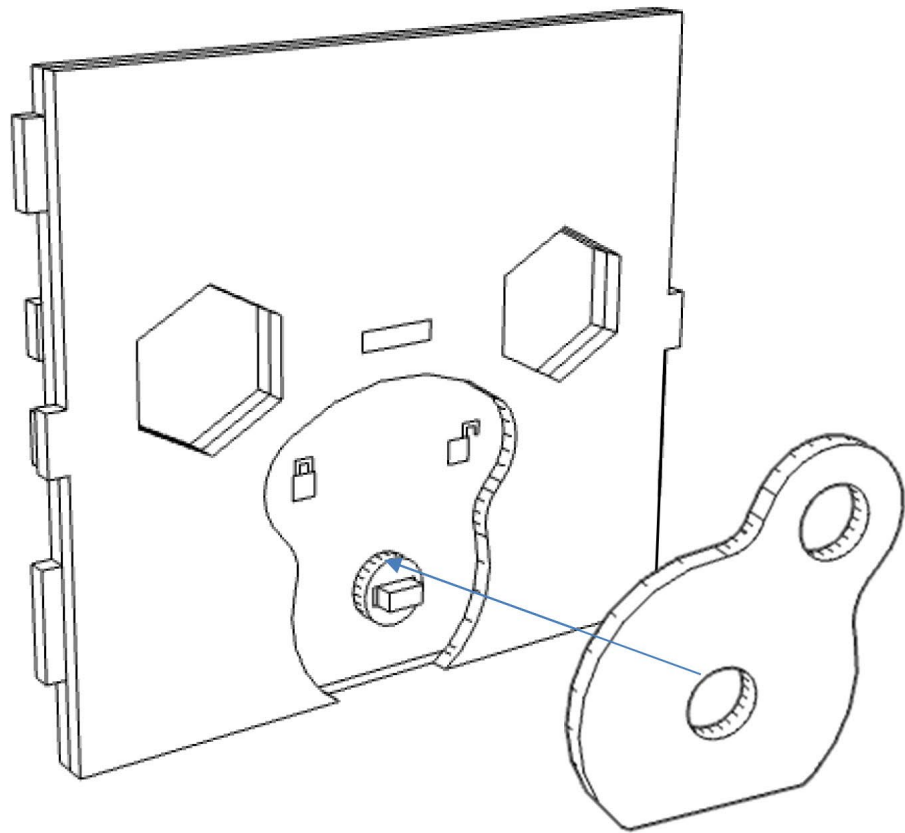


Step 30 (Tray pieces):

Attach the Lock Wall 3 piece to the Lock Wall 2 and Post pieces as shown.

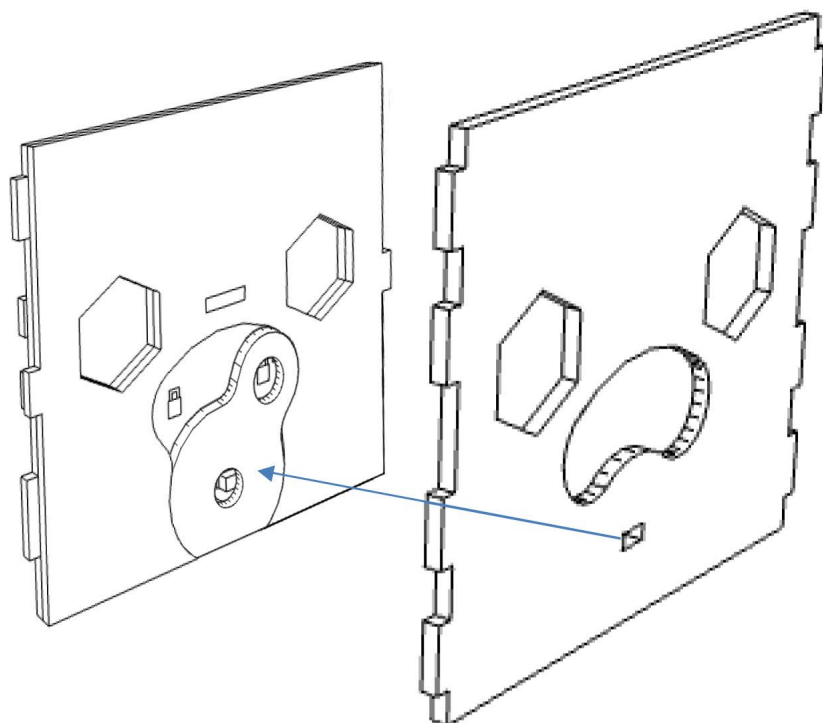


Step 31 (Tray pieces):

Attach the Lock Wall pieces to the Side Wall piece assembled in Step 23, making note it is facing the correct way as shown.

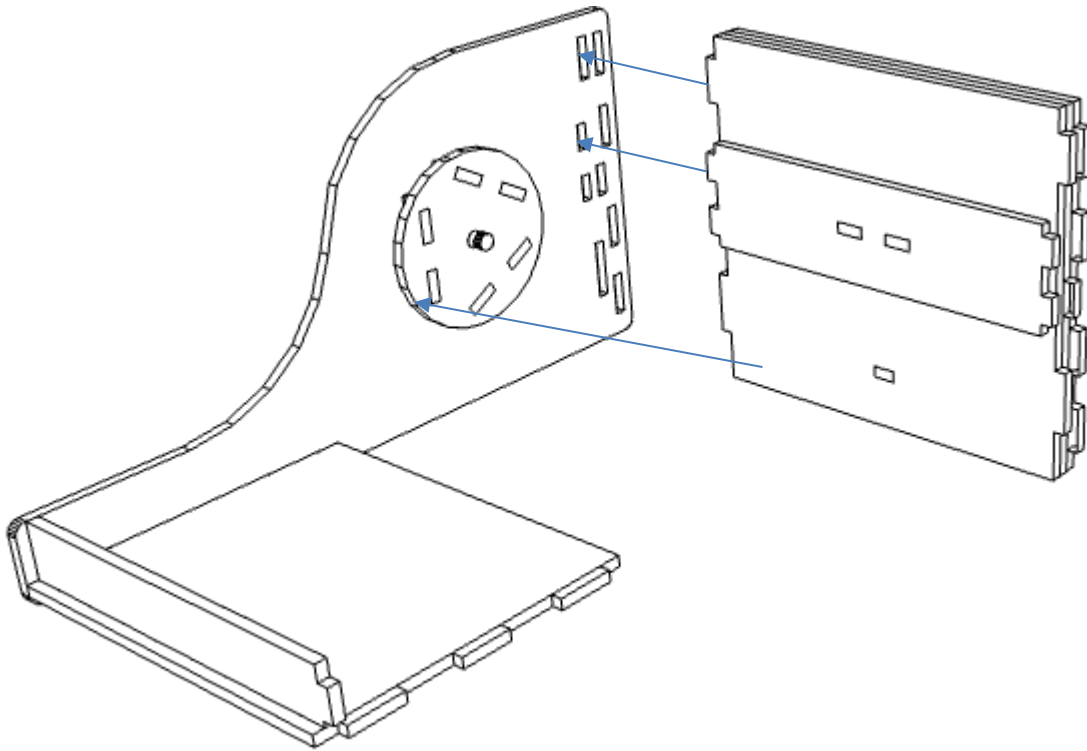


Step 32 (Tray pieces):

Attach the remaining Wheel assembled in Steps 20 and 21 to the remaining Side Wall piece (with the etching facing out), making note it is facing the correct way as shown.

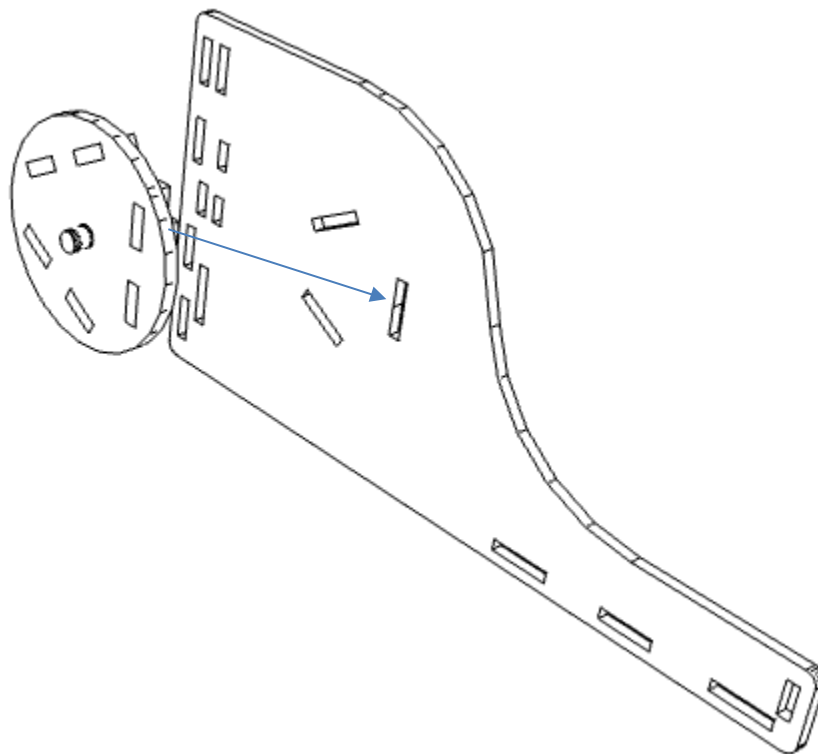


Step 33 (Tray pieces):

Slide the hole in the Bird Tower Side Wall into the Pin in the Tray Side Wall piece, making note it is facing the correct way as shown. **If you are using wood glue for assembly do not use glue in this Step.**

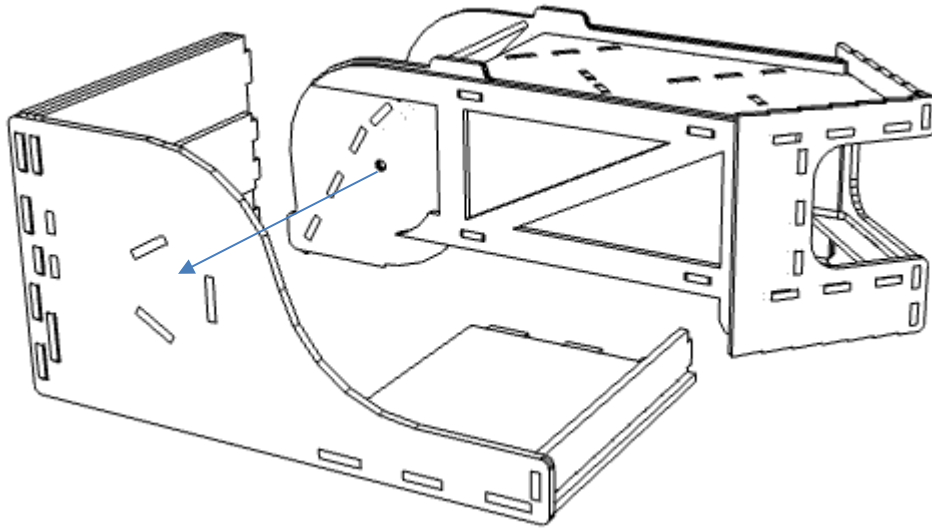

Step 34 (Tray pieces):

Attach the remaining Tray Side Wall piece to the Tray Floor, Tray Back Wall and Lock Wall pieces, and the Bird Tower Side Wall Pin piece, making note it is facing the correct way as shown.

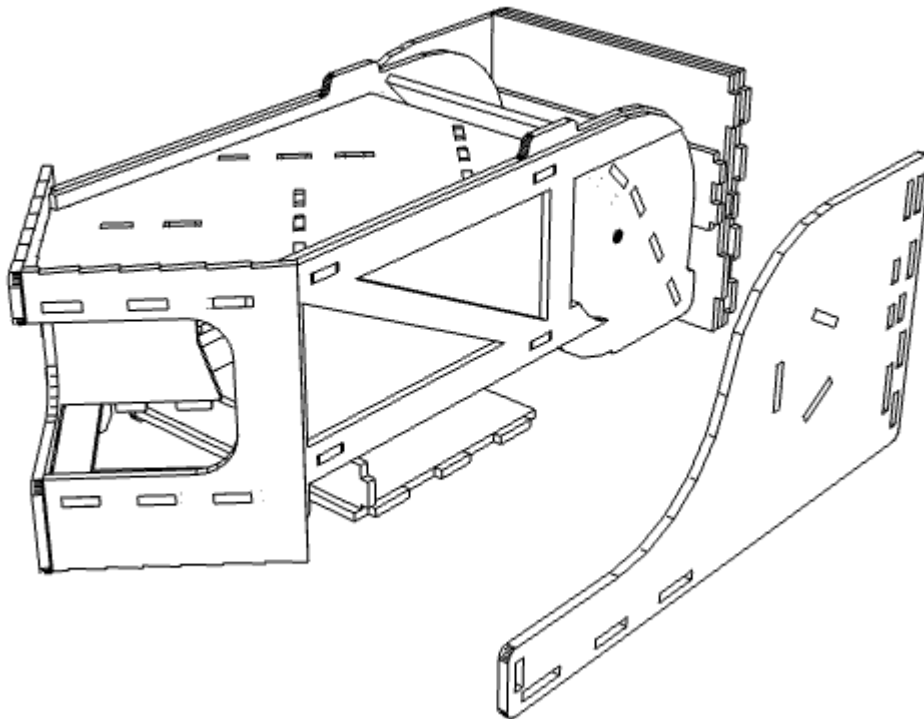

Tray is now complete.

**Follow us on Instagram and Facebook
@mysandboxgaming**

**Use the following link to watch assembly video:
www.mysandboxgaming.com/assembly-instructions**



www.mysandboxgaming.com